



Warning: This instrument is for use on Mercury / Mariner Outboards that are equipped for Two Function warning panels only. This instrument provides visual warning only.

Light Functions

- Temp light warns of temperature increase.
- Oil light warns of low oil reservoir levels.

CAUTION: Disconnect the battery during installation. Tighten nuts on the back clamp only slightly more than you can tighten with your fingers. Six **inch-pounds** of torque is sufficient. Over tightening could result in damage to the instrument and may void the warranty.

1. Cut a 2 1/16" diameter hole in the dash and mount the gauge with the back clamp supplied.

2. Consult your engine manual for proper wiring harness connections to your warning indicator. Connect wiring of the indicator as follows:

- Purple - 12V Positive (+) to your ignition switch
- Purple/White - 12V Positive (+) to your lighting circuit
- Black - To Ground (-)
- Tan/Black - To Engine temperature sensor
- Tan/White - To Oil level sensor

NOTE: To change light bulbs, twist the black socket assembly one-eighth turn counter clockwise until it pops out. The bulb pulls straight out of socket assembly. It is a GE No. 161 instrument lamp.